


# Blind Fixing Installation Instructions

01

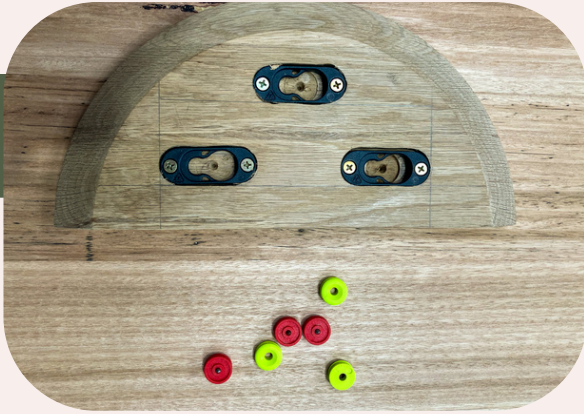

## Mark out handle location

- Using a light pencil or tape, mark out on the door or panel where the handle is to be located .

02



## Insert red pins into housing

- Insert the red marking pins into the clips at the back of the handle. Ensure that these are housed firmly and are not loose.


03



## Create marking holes

- Lightly place the handle in the previously marked out position.
- Firmly push down on the handle to ensure the red pins create clear holes in the door or panel.
- Remove the red marking pins from the handle.

04

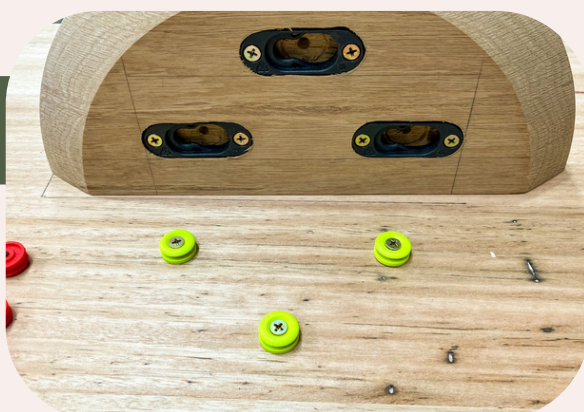

## Screw in green pins

- Screw the green pins into the door or panel at the marked holes.
- Place the handle over the green pins and knock the handle up or down so the pins click into place in the housing.